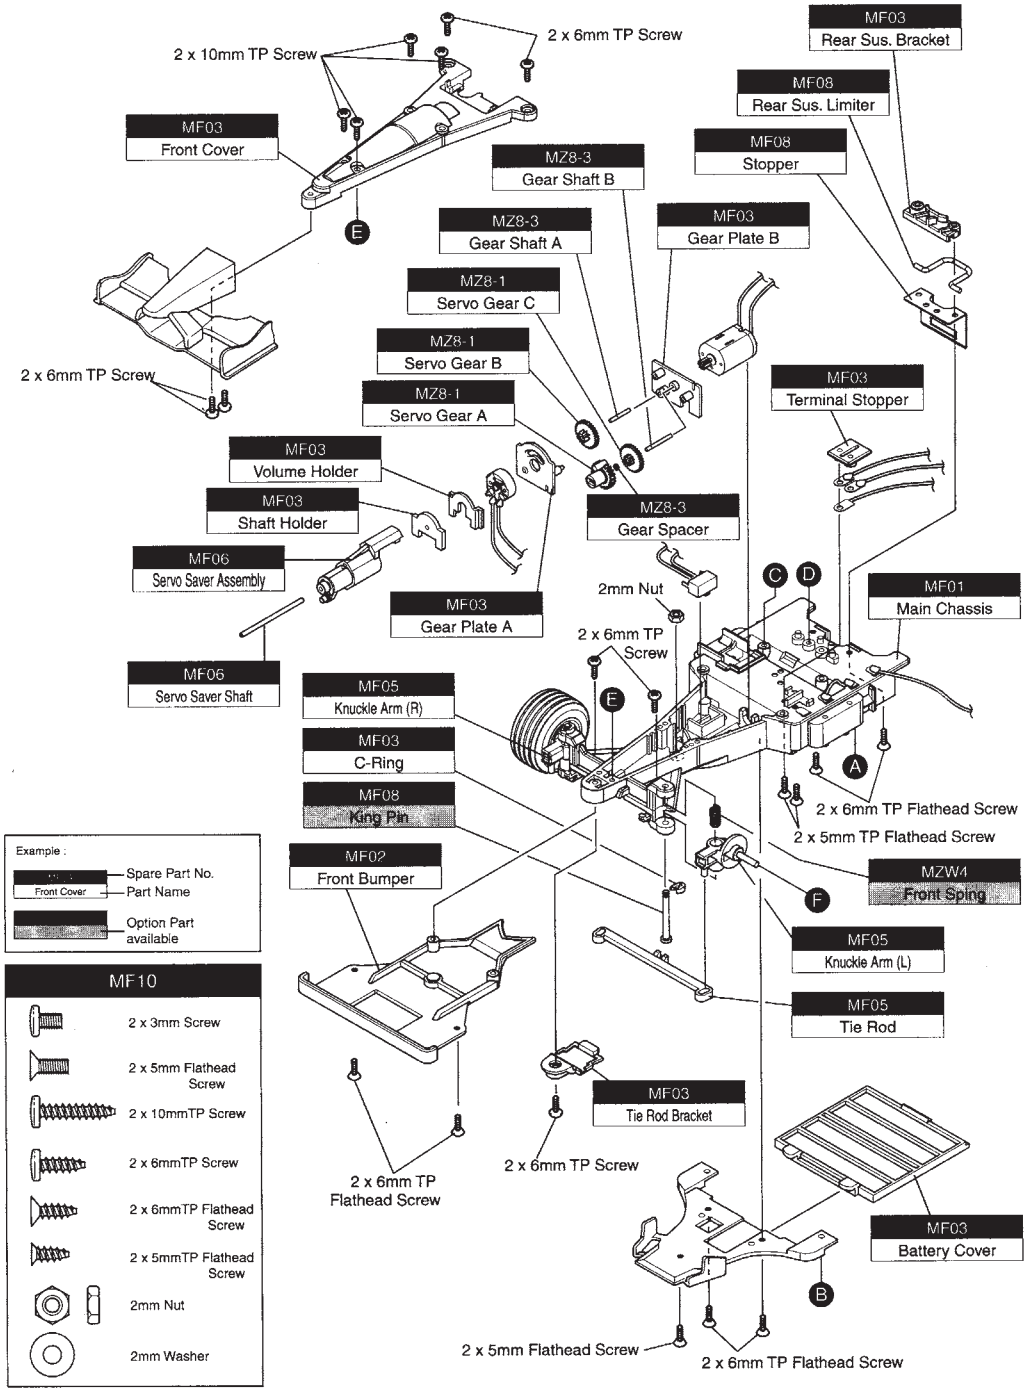
2 x 10mm TP Screw
2 x 6mm TP Screw
MF03 Rear Sus. Bracket
MF08 Rear Sus. Limiter
MF03 Front Cover
MZ8-3 Gear Shaft B
MF08 Stopper
MZ8-3 Gear Shaft A
MF03 Gear Plate B
MZ8-1 Servo Gear C
2 x 6mm TP Screw
MZ8-1 Servo Gear B
MZ8-1 Servo Gear A
MF03 Terminal Stopper
MF03 Volume Holder
MF03 Shaft Holder
MZ8-3 Gear Spacer
MF06 Servo Saver Assembly
2mm Nut
MF01 Main Chassis
MF03 Gear Plate A
2 x 6mm TP Screw
MF06 Servo Saver Shaft
MF05 Knuckle Arm (R)
MF03 C-Ring
MF08 King Pin
2 x 6mm TP Flathead Screw
2 x 5mm TP Flathead Screw
MF02 Front Bumper
MZW4 Front Sping
MF05 Knuckle Arm (L)
MF05 Tie Rod
MF03 Tie Rod Bracket
2 x 6mm TP Flathead Screw
2 x 6mm TP Screw
MF03 Battery Cover
2 x 5mm Flathead Screw
2 x 6mm TP Flathead Screw
Example :
Front Cover
Spare Part No.
Part Name
Option Part available
MF10
2 x 3mm Screw
2 x 5mm Flathead Screw
2 x 10mmTP Screw
2 x 6mmTP Screw
2 x 6mmTP Flathead Screw
2 x 5mmTP Flathead Screw
2mm Nut
2mm Washer

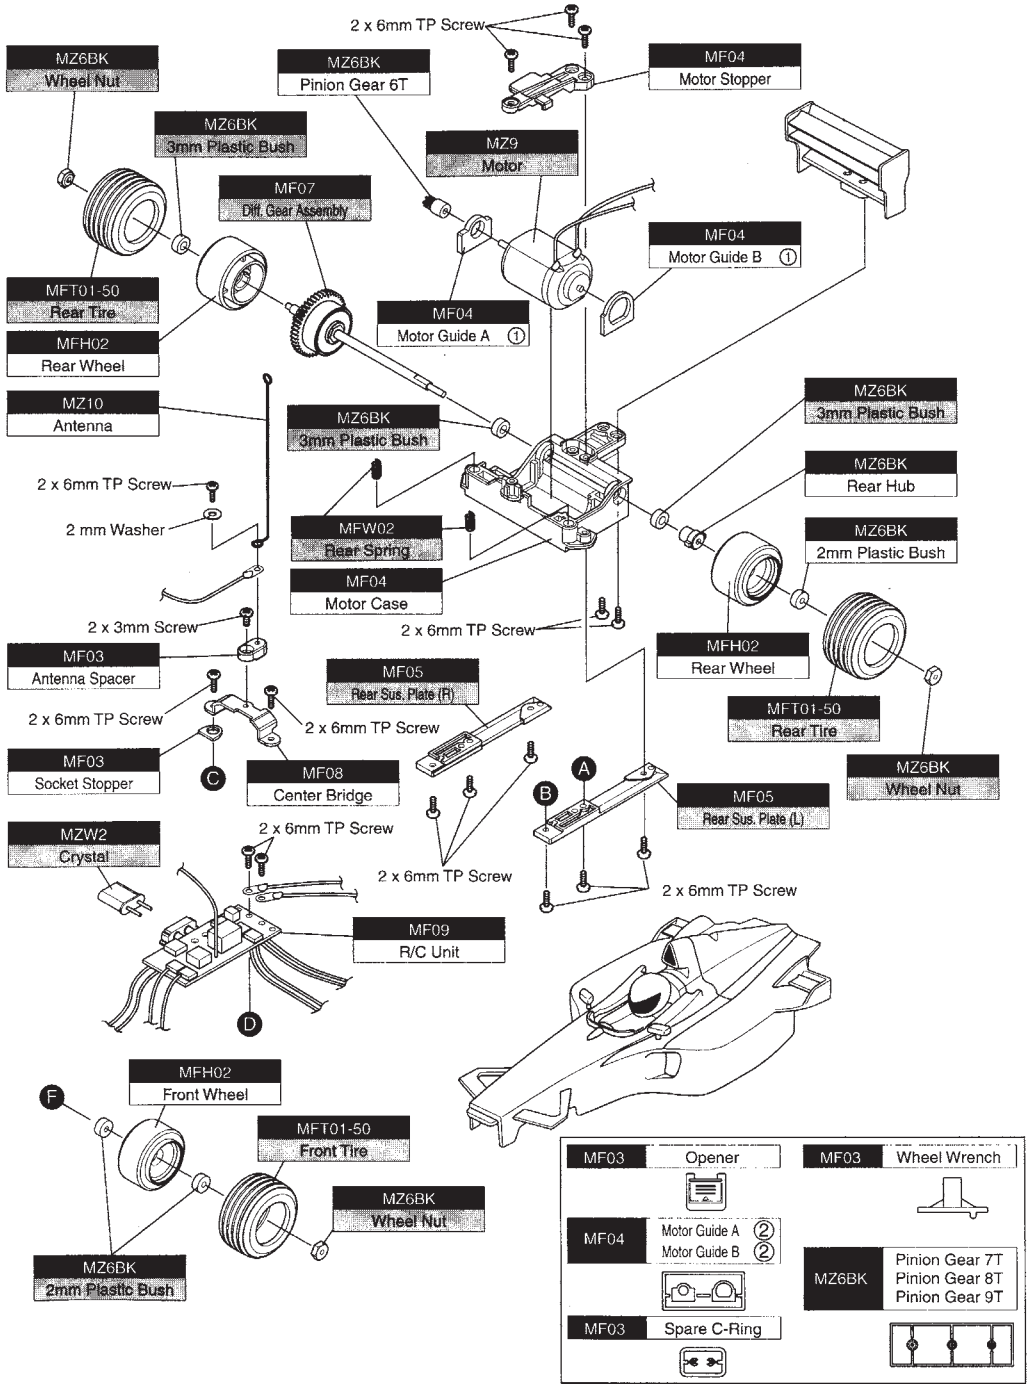
2 x 6mm TP Screw
MZ6BK Wheel Nut
MZ6BK Pinion Gear 6T
MF04 Motor Stopper
MZ6BK 3mm Plastic Bush
MZ9 Motor
MF07 Diff. Gear Assembly
MF04 Motor Guide B ①
MFT01-50 Rear Tire
MF04 Motor Guide A ①
MFH02 Rear Wheel
MZ10 Antenna
MZ6BK 3mm Plastic Bush
MZ6BK 3mm Plastic Bush
2 x 6mm TP Screw
MZ6BK Rear Hub
2 mm Washer
MFW02 Rear Spring
MZ6BK 2mm Plastic Bush
MF04 Motor Case
2 x 6mm TP Screw
2 x 3mm Screw
MFH02 Rear Wheel
MF03 Antenna Spacer
MF05 Rear Sus. Plate (R)
MFT01-50 Rear Tire
2 x 6mm TP Screw
2 x 6mm TP Screw
MF03 Socket Stopper
MF08 Center Bridge
MZ6BK Wheel Nut
MF05 Rear Sus. Plate (L)
MZW2 Crystal
2 x 6mm TP Screw
2 x 6mm TP Screw
2 x 6mm TP Screw
MF09 R/C Unit
MFH02 Front Wheel
MFT01-50 Front Tire
MZ6BK Wheel Nut
MZ6BK 2mm Plastic Bush
MF03 Opener
MF03 Wheel Wrench
MF04 Motor Guide A ②
Motor Guide B ②
MZ6BK Pinion Gear 7T
Pinion Gear 8T
Pinion Gear 9T
MF03 Spare C-Ring